

**ADEMCO VISTA SERIES**  
**VISTA-20P / VISTA-20PSIA**  
**VISTA-15P / VISTA-15PSIA**  
**Security Systems**

**Programming Guide**

**TO ENTER PROGRAMMING MODE** (using an alpha keypad connected to the control):

- A. POWER UP, then press [\*] and [#] at the same time, within 50 seconds of powering up (this method must be used if \*98 was used to exit program mode). **OR**  
 B. Initially, key: Installer Code (4 + 1 + 1 + 2) plus 8 + 0 + 0.

**PROGRAMMING MODE COMMANDS**

Task	Command/Explanation
<b>Go to a Data Field</b>	<b>Press [*] + [Field Number], followed by the required entry.</b>
<b>Entering Data</b>	When the desired field number appears, simply make the required entry. When the last entry for a field is entered, the keypad beeps three times and automatically displays the next data field in sequence. If the number of digits that you need to enter in a data field is less than the maximum digits available (for example, the phone number fields *41, *42), enter the desired data, then press [*] to end the entry. The next data field number is displayed.
<b>Review a Data Field</b>	<b>Press [#] + [Field Number].</b> Data will be displayed for that field number. No changes will be accepted in this mode.
<b>Deleting an Entry</b>	<b>Press [*] + [Field Number] + [*].</b> (Applies only to fields *40 thru *46, *94, and pager fields)
<b>Initialize Download ID</b>	<b>Press *96.</b> Initializes download ID and subscriber account number.
<b>Reset Factory Defaults</b>	<b>Press *97.</b> Sets all data fields to original factory default values.
<b>Zone Programming</b>	<b>Press *56.</b> Zone characteristics, report codes, alpha descriptors, and serial numbers for 5800 RF transmitters.
<b>Function Key Programming</b>	<b>Press *57.</b> Unlabeled keypad keys (known as ABCD keys) for special functions
<b>Zone Programming (Expert Mode)</b>	<b>Press *58.</b> Same options as *56 mode, but with fewer prompts. Intended for those familiar with this type of programming, otherwise *56 mode is recommended.
<b>Output Device Mapping</b>	<b>Press *79.</b> Assign module addresses and map individual relays/powerline carrier devices
<b>Output Programming</b>	<b>Press *80.</b> 4229 or 4204 Relay modules, Powerline Carrier devices, or on-board triggers
<b>Zone List Programming</b>	<b>Press *81.</b> Zone Lists for relay/powerline carrier activation, chime zones, pager zones, etc.
<b>Alpha Programming</b>	<b>Press *82.</b> Zone alpha descriptors
<b>Exit Program Mode with installer code lockout</b>	<b>Press *98.</b> Exits programming mode and <i>prevents</i> re-entry by: Installer Code + 8 + 0 + 0. To reenter programming mode, the system must be powered down, then powered up. Then use method A above. See field *88 for other *98 Program mode lockout options.
<b>Exit Program Mode</b>	<b>Press *99.</b> Exits programming mode and <i>allows</i> re-entry by: Installer Code + 8 + 0 + 0 or method A above.

**SPECIAL MESSAGES**

**OC** = OPEN CIRCUIT (no communication between Keypad and Control).

**EE** or **ENTRY ERROR** = ERROR (invalid field number entered; re-enter valid field number).

After powering up, **AC**, **dl** (disabled) or **Busy Standby** and **NOT READY** will be displayed after approximately 4 seconds. This will revert to a **Ready** message in approximately 1 minute, which allows PIRS, etc. to stabilize. You can bypass this delay by pressing [#] + [0].

If **E4** or **E8** appears, more zones than the expansion units can handle have been programmed. The display will clear after you correct the programming.

**TABLE OF DEVICE ADDRESSES**

This Device	Uses Address	Reports as ††	Enabled By...
RF Receiver	00	100	*56 zone programming: input device type entry
AUI 1	01	101	Automatic if AUI enable field *189 enabled for AUI 1
AUI 2	02	102	Automatic if AUI enable field *189 enabled for AUI 2
Long Range Radio	03	103	automatic if output to long range radio field *29 enabled
4286 Voice Module	04	104	automatic if phone module access code field *28 enabled
Zone Expanders (4219/4229): module 1 (for zones 09 - 16) module 2 (for zones 17 - 24) module 3 (for zones 25 - 32) module 4 zones 33 - 40 module 5 zones 41 - 48	07 08 09** 10** 11**	107 108 109 110 111	*56 zone programming: input device type entry, then: automatic if zone no. 9-16 entered as AW type or relay assigned automatic if zone no. 17-24 entered as AW type or relay assigned automatic if zone no. 25-32 entered as AW type or relay assigned automatic if zone no. 33-40 entered as AW type or relay assigned automatic if zone no. 41-48 entered as AW type or relay assigned
Relay Modules (4204): module 1 module 2 module 3 module 4	12 13 14** 15**	112 113 114 115	*79 output device programming: device address prompt: entered at device address prompt entered at device address prompt entered at device address prompt entered at device address prompt
Keypads: keypad 1 keypad 2 keypad 3 keypad 4 keypad 5 keypad 6 keypad 7 keypad 8	16 17 18 19 20 21 22 23	n/a n/a n/a n/a n/a n/a n/a n/a	data field programming as listed below: always enabled, all sounds enabled. data field *190 data field *191 data field *192 data field *193 data field *194 data field *195 data field *196
5800TM Module	28	n/a	automatic

\*\* These module addresses apply to VISTA-20P only.

†† Addressable devices are identified by "1" plus the device address when reporting. Enter report code for zone 91 to enable addressable device reporting (default = reports enabled). See field \*199 for addressable device (ECP) 3-digit/2-digit identification keypad display options.

# PROGRAMMING FORM

Entries apply to the ADEMCO VISTA-15P/VISTA-15PSIA and ADEMCO VISTA-20P/VISTA-20PSIA controls, except entries shown in dashed boxes, which apply only to the VISTA-20P/VISTA-20PSIA (partition entries) and are not applicable to the VISTA-15P/VISTA-15PSIA. In addition, where noted, certain fields have special settings when used with the VISTA-20PSIA/VISTA-15PSIA (indicated by **V20PSIA/V15PSIA** with heavy borders and reverse type throughout for easy identification).

Entry of a number other than one specified will give unpredictable results. Values shown in brackets are factory defaults.

**SIA Guidelines:** Notes in certain fields give instructions for programming the VISTA-20P/VISTA-15P for False Alarm Reduction.

**\*20 Installer Code** [4112]      
4 digits, 0-9

**\*21 Quick Arm Enable** [0,0]    
0 = no; 1 = yes Part. 1 Part. 2

**\*22 RF Jam Option**  [0]  
0 = no RF Jam detection; 1 = send RF Jam report  
UL: must be 1 if wireless devices are used

**\*23 Quick (Forced) Bypass** [0,0]    
0 = no quick bypass UL: must be "0" Part. 1 Part. 2  
1 = allow quick bypass (code + [6] + [#])

**\*24 RF House ID Code** [00,00,00]       
00 = disable all wireless keypad usage Part. 1 Part. 2 Common  
01-31 = using 5827, 5827BD or 5804BD keypad

**\*26 Chime By Zone** [0]   
0 = no; 1 = yes (list chime zones on zone list 3 using \*81 Menu mode)

**\*27 Powerline Carrier Device (X-10)** [0]   
**House Code**  
0 = A; 1 = B; 2 = C; 3 = D; 4 = E; 5 = F; 6 = G; 7 = H; 8 = I; 9 = J;  
#10 = K; #11 = L; #12 = M; #13 = N; #14 = O; #15 = P  
UL: not for fire or UL installations

**\*28 Access Code For Phone Module** [00]    
00 = disable; (Partition 1 only)  
1st digit: enter 1-9; 2nd digit: enter # + 11 for "\*", or # + 12 for "#".  
UL: must be "00" for UL Commercial Burg. installations

**\*29 Long Range Radio Output** [0]   
0 = disable; 1 = enable

**\*31 Single Alarm Sounding Per Zone** [0]   
0 = unlimited sounding; 1 = one alarm sounding per zone

**V20PSIA/V15PSIA:** If "0" selected, "alarm sounding per zone" will be the same as the "number of reports in armed period" set in field \*93 (1 if one report, 2 if 2 reports, unlimited for zones in zone list 7).

**\*32 Fire Alarm Sounder Timeout** [0]   
0 = sound stops at timeout; 1 = no timeout UL: must be "1" for fire install.

**\*33 Alarm Sounder (Bell) Timeout** [1]   
0 = none; 1 = 4 min; 2 = 8 min; 3 = 12 min; 4 = 16 min;  
UL: For residential fire alarm installation, must be set for a minimum of 4 min (option 1); for UL Commercial Burglary installations, must be minimum 16 min (option 4)

**\*34 Exit Delay** [60,60]      
00 - 96 = 0 - 96 secs; 97 = 120 secs Part. 1 Part. 2  
SIA Guidelines: minimum exit delay is 45 seconds

**V20PSIA/V15PSIA:** 45 - 96 = 45 - 96 secs; 97 = 120 secs  
NOTE: Entries less than 45 will result in a 45-second delay.

UL: see inst. instr. for requirements. Common zones use part. 1 delay.

**\*35 Entry Delay #1** [30,30]      
Common zones use same delay as partition 1. Part. 1 Part. 2  
00 - 96 = 0 - 96 seconds; 97 = 120 secs; 98 = 180 secs; 99 = 240 secs  
SIA Guidelines: minimum entry delay is 30 seconds

**V20PSIA/V15PSIA:**  
30-96 = 30 - 96 secs; 97 = 120 secs; 98 = 180 secs; 99 = 240 secs  
NOTE: Entries less than 30 will result in a 30-second delay.

For UL Residential Burglary Alarm installations, must be set for a maximum of 30 seconds; entry delay plus dial delay should not exceed 1 min. For UL Commercial Burglar Alarm, total entry delay may not exceed 45 seconds.

**\*36 Entry Delay #2** [30,30]      
See \*35 Entry Delay 1 for entries. Part. 1 Part. 2

**\*37 Audible Exit Warning** [1,1]    
0 = no; 1 = yes (SIA Guidelines: must be enabled) Part. 1 Part. 2

**V20PSIA/V15PSIA:** feature always enabled; field does not exist

**\*38 Confirmation Of Arming Ding** [0,0]    
0 = no; 1 = yes (wired keypads and RF) Part. 1 Part. 2  
2 = yes, RF only  
UL: must be "1" for UL Commercial Burglar Alarm inst.

**\*39 Power Up In Previous State** [1]   
0 = no, always power up disarmed; 1 = yes, power up in previous state  
UL: must be "1" SIA Guidelines: must be "1"

**DIALER PROGRAMMING (\*40 - \*42)**  
Do not fill unused spaces. Enter 0-9; #+11 for "\*"; #+12 for "#"; #+13 for a 2-second pause. If fewer than the maximum digits entered, exit the field by pressing [\*]. The next data field number is displayed.

**\*40 PABX Access Code or**

**Call Waiting Disable** Enter up to 6 digits. To clear entries, press \*40\*. If call waiting is used, enter call waiting disable digits "\* (#+11) 70" plus "# + 13" (pause).  
NOTES: 1. The call waiting disable feature cannot be used on a PABX line.  
2. Using Call Waiting Disable on a non-call waiting line will prevent successful communication to the central station.

**V20PSIA/V15PSIA:** If call waiting is used, enter call waiting disable digits as described above, and also set Call Waiting Disable option in field \*91.

**\*41 Primary Phone No.**

**\*42 Second Phone No.**

Enter up to 20 digits. To clear entries, press \*41\* or \*42\* respectively.

**NOTE: For fields \*43 thru \*46:** Enter 0-9; #+11 for B; #+12 for C; #+13 for D; #+14 for E; #+15 for F. Enter [\*] as the fourth digit if a 3-digit account number (for 3+1 dialer reporting format) is used. Enter 0 as the first digit of a 4-digit account number for Nos. 0000-0999. Exit field by pressing \* if only 3 digits are used. E.g., For Acct. B234, enter: #+11 + 2 + 3 + 4

**\*43 Partition 1 Primary Acct. No.**     /     [FFFFFFFF] Enter 4 or 10 digits, as chosen in \*48 Report Format. See box above. To clear entries, press \*43\*.

**\*44 Part. 1 Secondary Acct. No.** (see field \*43 for entries)     /     [FFFFFFFF] To clear, press \*44\*.

**\*45 Partition 2 Primary Acct. No.** (see field \*43 for entries)     /     [FFFFFFFF] To clear, press \*45\*.

**\*46 Partition 2 Secondary Acct. No.** (see field \*43 for entries)     /     [FFFFFFFF] To clear, press \*46\*.

**\*47 Phone System Select** [1]   
If Cent. Sta. is not on a WATS line: 0=Pulse Dial; 1=Tone Dial;  
if Cent. Sta. is on a WATS line: 2 = Pulse Dial ; 3 = Tone Dial

**\*48 Report Format** [77]    
0 = 3+1, 4+1 ADEMCO L/S STANDARD primary secondary  
1 = 3+1, 4+1 RADIONICS STANDARD  
2 = 4+2 ADEMCO L/S STANDARD  
3 = 4+2 RADIONICS STANDARD  
5 = 10-digit ADEMCO CONTACT ID® REPORTING  
6 = 4+2 ADEMCO EXPRESS  
7 = 4-digit ADEMCO CONTACT ID® REPORTING  
8 = 3+1, 4+1 ADEMCO L/S EXPANDED  
9 = 3+1, 4+1 RADIONICS EXPANDED

**\*49 Split/Dual Reporting** [0]

0 = Standard/backup reporting only (all to primary)

Primary Phone No.	2nd Phone No.
1 = Alarms, Restore, Cancel	Others
2 = All except Open/Close, Test	Open/Close, Test
3 = Alarms, Restore, Cancel	All
4 = All except Open/Close, Test	All
5 = All	All

**\*50 Burglary Dialer Delay** [2,0]

Delay Time: Delay Time **V20PSIA/V15PSIA**

0 = no delay **UL: must be "0"** Delay Disable

1 = 15 seconds; 2 = 30 seconds; 3 = 45 seconds

SIA Guidelines: delay must be minimum of 30 seconds

**V20PSIA/V15PSIA:**

Delay Time: 1 = 15 seconds; 2 = 30 seconds; 3 = 45 seconds

Delay Disable:

0 = use delay set in entry 1

1 = dial delay disabled for zones listed in zone list 6 (use zone list 6 to enter those zones that require dial delay to be disabled; these zones ignore the setting in entry 1)

UL: Dial delay plus entry delay must not exceed one minute; use zone list 6 to disable dial delay from appropriate zones, if necessary.

**\*53 SESCOA/Radionics Select** [0]

0 = Radionics (0-9, B-F); enter "0" for all non-SESCOA formats

1 = SESCOA (0-9 only reporting)

**\*54 Dynamic Signaling Delay** [0]

Select delay from 0 to 225 secs, in 15-sec increments.

0 = no delay (both signals sent); 1 = 15 secs; 2 = 30 secs, etc.

**UL: Grade AA must be "0;" Grade A must be "15" max**

**\*55 Dynamic Signaling Priority** [0]

0 = Primary Dialer first; 1 = Long Range Radio first.

For UL Commercial Burglary installations that use a DACT and LRR, this field must be "0".

**\*56, \*57, \*58 Menu Modes**

These are Menu Mode commands, not data fields, for Zone Programming, Function Key Programming, and Expert Mode Zone Programming respectively. See page 2 and respective sections later in this document.

**TO PROGRAM SYSTEM STATUS, & RESTORE REPORT CODES (\*59 thru \*68, \*70 thru \*76, and \*89):**

**For 3+1 or 4+1 Standard Format:** Enter a code in the *first* box: 1-9, #+10 for 0, #+11 for B, #+12 for C, #+13 for D, #+14 for E, #+15 for F.

A 0 (*not* #+10) in the *first* box will disable a report. A 0 (*not* #+10) in the *second* box will result in automatic advance to the next field.

**For Expanded or 4+2 Format:** Enter codes in *both* boxes (1st and 2nd digits) for 1-9, 0, or B-F, as described above.

A 0 (*not* #+10) in the *second* box will eliminate the expanded message for that report. A 0 (*not* #+10) in *both* boxes will disable the report.

**For Ademco Contact ID® Reporting:** Enter any digit (other than 0) in the *first* box, to enable zone to report (entries in the *second* boxes are ignored).

A 0 (*not* #+10) in the *first* box disables the report.

**UL: see installation instructions for requirements**

**SYSTEM STATUS REPORT CODES (\*59-\* 68)**

**\*59 Exit Error Alarm Report Code** [0]

See above for entries. **V20PSIA/V15PSIA: [1] Always enabled.**

**\*60 Trouble Report Code** [00]

**\*61 Bypass Report Code** [00]

**\*62 AC Loss Report Code** [00]

**\*63 Low Bat Report Code** [00]

**\*64 Test Report Code** [00]

Use Scheduling mode to set periodic test reports, or use the following key commands:

installer code +[#] + [0] + 0 = test report sent every 24 hours

installer code +[#] + [0] + 1 = test report sent once per week

installer code +[#] + [0] + 2 = test report sent every 28 day

Each mode sets schedule 32 (VISTA-20P) or schedule 08 (VISTA-15P) to the stated repeat option; first test report sent 12 hours after command.

**\*65 Open Report Code** [0,0,0]

Part. 1 Part. 2 Common

**\*66 Arm Away/Stay Rpt Code**

[0,0,0,0,0,0]

Away Stay Away Stay Away Stay

Part. 1 Part. 2 Common

**\*67 RF Trans. Low Bat Report Code** [00]

**UL: must be enabled if wireless devices are used**

**\*68 Cancel Report Code** [00]

**V20PSIA/V15PSIA: [10] Report enabled.**

**\*69 Recent Closing Report Code** [11]

**V20PSIA/V15PSIA: Always enabled.**

Field does not apply to other controls.

**RESTORE REPORT CODES (\*70 – \*76)**

**\*70 Alarm Restore Rpt Code** [0]

**\*71 Trouble Restore Rpt Code** [00]

**\*72 Bypass Restore Rpt Code** [00]

**\*73 AC Restore Rpt Code** [00]

**\*74 Low Bat Restore Rpt Code** [00]

**\*75 RF Trans. Lo Bat Rst Rpt Code** [00]

**UL: must be enabled if wireless devices are used**

**\*76 Test Restore Rpt Code** [00]

**OUTPUT AND SYSTEM SETUP (\*77 – \*93)**

**\*77 Daylight Savings Time** [4][10]

**Start/End Month**

0 = Disabled

1-12 = January-September (1 = Jan, 2 = Feb, etc)

#+10 = October; #+11 = November; #+12 = December

**\*78 Daylight Savings Time** [1][5]

**Start/End Weekend**

0 = disabled; 1 = first; 2 = second; 3 = third; 4 = fourth;

5 = last; 6 = next to last; 7 = third to last

**\*79, \*80, \*81, \*82 Menu Modes**

These are Menu Mode commands, not data fields, for Output Device Mapping, Output Programming, Zone List Programming, and Alpha Programming respectively. See page 2 and their respective sections in the Installation and Setup Guide for procedures.

**\*84 Auto Stay Arm** [3]

0 = no; 1 = partition 1 only; 2 = partition 2 only; 3 = both partitions

**\*85 Cross Zone Timer** [0]

**This option not for use in UL installations.**

(assign cross zones on zone list 4, using \*81 Menu mode)

0 = 15 seconds	6 = 2-1/2 min	#+12 = 8 min
1 = 30 seconds	7 = 3 min	#+13 = 10 min
2 = 45 seconds	8 = 4 min	#+14 = 12 min
3 = 60 seconds	9 = 5 min	#+15 = 15 min
4 = 90 seconds	#+10 = 6 min	
5 = 2 minutes	#+11 = 7 min	

**\*86 Cancel Verify Keypad Display** [1]

0 = no "alarm canceled" display

1 = display "Alarm Canceled" when system is disarmed after an alarm has occurred. (To clear the "ALARM CANCELED" display, the user must enter the security code + OFF again.)

**\*87 Misc. Fault Delay Time** [0]

(used with Configurable Zone Types "digit 6")

0 = 15 seconds	6 = 2-1/2 min	#+12 = 8 min
1 = 30 seconds	7 = 3 min	#+13 = 10 min
2 = 45 seconds	8 = 4 min	#+14 = 12 min
3 = 60 seconds	9 = 5 min	#+15 = 15 min
4 = 90 seconds	#+10 = 6 min	
5 = 2 minutes	#+11 = 7 min	

**UL: may only be used on non-burglar alarm/ non-fire alarm zones when used in fire and/or UL burglar alarm installation**

**\*88 Program Mode Lockout Options** [0]

0 = standard \*98 installer code lockout (reentry only by [\*] + [#] within 50 seconds after power up)  
 1 = lockout [\*] + [#] reentry after \*98 exit (reenter via installer code or downloader only)  
 2 = not used  
 3 = lockout local programming after \*98 exit (reenter by downloader only)

**\*89 Event Log Full Report Code** [00]

See box above field \*59 for report code entries.

**\*90 Event Log Enables** [3]

**NOTE:** System messages are logged when any non-zero entry is made.  
 0 = None; 1 = Alarm/Alarm Restore  
 2 = Trouble/Trouble Restore;  
 4 = Bypass/Bypass Restore;  
 8 = Open/Close. *Example:* To select "Alarm/Alarm Restore", and "Open/Close", enter 9 (1 + 8); To select all, enter #15.

**\*91 Option Selection** [8, 0]

**Options:** 0 = None  Options  **V20PSIA/V15PSIA**  
 4 = AAV  **UL: must use ADEMCO UVCM module**  Call Wait Disable  
 8 = Exit Delay Restart/Reset  **UL: must be disabled**  
 #+12 = AAV and Exit Delay Restart/Reset  
 SIA Guidelines: Exit Delay should be enabled.

**V20PSIA/V15PSIA:**  
**Options: Same as listed above.**  
**Call Waiting Disable:**  
 0 = call waiting not used  
 1 = call waiting disable digits (\*70) entered in field \*40; (when selected, the system dials the entry in field \*40 only on alternate dial attempts; this allows proper dialing in the event call waiting service is later canceled by the user).

**\*92 Phone Line Monitor Enable** [0,0]

**UL:** see Inst. Instructions for requirements  1  2

**NOTE:** Output Device must either be programmed to be STOPPED in field \*80 or STOPPED by Code + # + 8 + output number.  
**Entry 1:** 0 = disabled, 1-15 = 1 min - 15 min  
 (#+10 = 10 min; #+11 = 11 min; #+12 = 12 min; #+13 = 13 min; #+14 = 14 min; #+15 = 15 min)  
**Entry 2:**  
 0 = Keypad display when line is faulted  
 1 = Keypad display plus keypad trouble sound  
 2 = Same as "1", plus programmed output device STARTS. If either partition is armed, external sounder activates also.

**\*93 Reports In Armed Period** [1,0]

**Per Zone (Swinger Suppression)** Restrict  **V20PSIA/V15PSIA**  
 Restrict Report Pairs: Report Pairs Unlimited  
 0 = Unlimited Reports Reports Enable  
 1 = 1 report pair  
 2 = 2 report pairs SIA Guidelines: Must be set for option 1 or 2.

**V20PSIA/V15PSIA:**  
**Restrict Report Pairs:** 1 = 1 report pair; 2 = 2 report pairs  
**Unlimited Reports Enable:**  
 0 = restrict reports to the setting in entry 1  
 1 = unlimited reports for zones listed in zone list 7; (use zone list 7 to enter those zones that require unlimited reporting; these zones ignore the setting in entry 1)

**DOWNLOAD INFORMATION (\*94, \*95)**

**\*94 Download Phone No.**

Enter up to 20 digits, 0-9; #+11 for '\*'; #+12 for '#'; #+13 for a 2-second pause. Do not fill unused spaces. If fewer than 20 digits, exit field by pressing \*. To clear entries from field, press \*94\*.  
**UL:** downloading may be performed only if a technician is at the site.

**\*95 Ring Count For Downloading** [15]

**NOTE:** Do not enter "0" if using 4285/4286 Phone Module.  
 0 = Disable Station Initiated Download;  
 1-14 = number of rings (1-9, # +10 =10, # +11 =11, # +12 =12, # +13 =13, # +14 =14);  
 15 = answering machine defeat (# +15 =15).

**\*96 \*97 Initialize/Reset Defaults**  
 This is a command, not a data field. See page 2.

**\*98, \*99 Exit Commands**  
 This is a command, not a data field. See page 2.

**PAGER OPTIONS (\*160- \*172)**

**\*160 Pager 1 Phone No.**

Enter up to 20 digits. 0-9; #+11 = '\*'; #+12 = '#'; #+13 = 2-sec pause

**\*161 Pager 1 Characters**

Enter the optional prefix characters, up to 16 digits.  
 0-9; #+11 = '\*'; #+12 = '#'; #+13 = 2-second pause.

**\*162 Pager 1 Report Options**

[0,0,0]

Part. 1 Part. 2 common  
 For each partition, select from the following options:  
 0 = no reports sent  
 1 = Opens/closes all users  
 4 = All alarms and troubles  
 5 = All alarms / troubles, and opens/closes for all users  
 12 = Alarms / troubles for zones entered in zone list 9  
 13 = Alarms / troubles for zones entered in zone list 9, and opens/closes for all users

**\*163 Pager 2 Phone No.**

Enter up to 20 digits. 0-9; #+11 = 'Q'; #+12 = '#'; #+13 = 2-sec pause

**\*164 Pager 2 Characters**

Enter the optional prefix characters, up to 16 digits.  
 0-9; #+11 = '\*'; #+12 = '#'; #+13 = 2-second pause.

**\*165 Pager 2 Report Options**

[0,0,0]

Part. 1 Part. 2 common  
 See field \*162 for reporting options. Select for each partition (use zone list 10 if using options 12 or 13).

**\*166 Pager 3 Phone No.**

Enter up to 20 digits. 0-9; #+11 = '\*'; #+12 = '#'; #+13 = 2-sec pause

**\*167 Pager 3 Characters**

Enter the optional prefix characters, up to 16 digits.  
 0-9; #+11 = '\*'; #+12 = '#'; #+13 = 2-second pause.

**\*168 Pager 3 Report Options**

[0,0,0]

Part. 1 Part. 2 common  
 See field \*162 for reporting options. Select for each partition (use zone list 11 if using options 12 or 13).

**\*169 Pager 4 Phone No.**

Enter up to 20 digits. 0-9; #+11 = '\*'; #+12 = '#'; #+13 = 2-sec pause

**\*170 Pager 4 Characters**

Enter the optional prefix characters, up to 16 digits.  
 0-9; #+11 = '\*'; #+12 = '#'; #+13 = 2-second pause.

**\*171 Pager 4 Report Options**

[0,0,0]

Part. 1 Part. 2 common  
 See field \*162 for reporting options. Select for each partition (use zone list 12 if using options 12 or 13).

**\*172 Pager Delay Option For Alarms** [3]

0 = none; 1 = 1 minute; 2 = 2 minutes; 3 = 3 minutes  
 This delay is for ALL pagers in the system.



## MISCELLANEOUS SYSTEM FIELDS (\*174-\*181)

### \*174 Clean Me Reporting Options [0]

(for ESL smoke detectors)

0 = disable; 1 = Clean Me signal reports;

**NOTE:** If Clean Me is enabled, you must enter "3" in field \*56 programming for zone 1 response time.

### \*177 Device Duration 1, 2 [0] [0]

(used in \*80 Menu mode-Device Actions 5/6)

0 = 15 seconds 6 = 2-1/2 min #+11 = 7 min

1 = 30 seconds 7 = 3 min #+12 = 8 min

2 = 45 seconds 8 = 4 min #+13 = 10 min

3 = 60 seconds 9 = 5 min #+14 = 12 min

4 = 90 seconds #+10 = 6 min #+15 = 15 min

5 = 2 minutes

### \*181 50/60 Hertz AC Operation [0]

0 = 60 Hz; 1 = 50 Hz

## CONFIGURABLE ZONE TYPE OPTIONS (\*182-\*185)

(see Configurable Zone Type Worksheet on page 7)

### \*182 Configurable Zone Type 90

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------

1 2 3 4 5 6 7 8 9 10

Enter the appropriate value for each entry, 1-10, based on the charts provided on the next page. Each entry is the sum of the values of its selected options

(0-9, #+10=10, #+11=11, #+12=12, #+13=13, #+14=14, #+15=15).

**UL:** Do not configure zones as a fire alarm or UL burglar alarm zone.

### \*183 Zone Type 90 Report Codes

**IMPORTANT:** Use existing Contact ID® codes, if appropriate, or define unique codes in CID code range 750-789. See important note in installation instructions.

90 ALARM ID: XXX  
TROUBLE ID: XXX

Enter the desired 3-digit Contact ID® report codes for alarms and troubles occurring on zones assigned to this zone type. Enter the codes sequentially (all 6 digits). When entering digits, [#] moves cursor back, [\*] moves forward. Press [\*] when done to continue.

### \*184 Configurable Zone Type 91

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------

1 2 3 4 5 6 7 8 9 10

Enter the appropriate value for each entry, 1-10, based on the charts provided on the next page. Each entry is the sum of the values of its selected options

(0-9, #+10=10, #+11=11, #+12=12, #+13=13, #+14=14, #+15=15).

**UL:** Do not configure zones as a fire alarm or UL burglar alarm zone.

### \*185 Zone Type 91 Report Codes

**IMPORTANT:** Use existing Contact ID® codes, if appropriate, or define unique codes in CID code range 750-789. See important note in installation instructions.

91 ALARM ID: XXX  
TROUBLE ID: XXX

Enter the desired 3-digit Contact ID® report codes for alarms and troubles occurring on zones assigned to this zone type. Enter the codes sequentially (all 6 digits). When entering digits, [#] moves cursor back, [\*] moves forward. Press [\*] when done to continue.

### \*189 AUI Device 1 and 2 Enable [1] [1]

(for Touch Screen Style Keypads) AUI 1 AUI 2  
System supports up to two touch screen style keypads (e.g., Symphony Advanced User Interface, and 6270 Touch Screen Keypad).

**AUI Compatibility Note:** To ensure proper AUI device operation, connect only to controls having microprocessor version 3.0 or higher, and use AUI devices with the following rev levels: 6270 series use version 1.0.9 or higher; 8132/8142 (Symphony) series use version 1.1.175 or higher.

Touch Screen (AUI) device 1: Must set AUI device address to 1  
Touch Screen (AUI) device 2: Must set AUI device address to 2

**VISTA-20P:** Enter each touch screen keypad's home partition

0 = disable; 1 = partition 1; 2 = partition 2; 3 = partition 3 (common)

**VISTA-15P:** 0 = disable; 1 = enable

**NOTE:** Use of touch screen style keypads does not affect the number of standard keypads supported.

## KEYPAD OPTIONS \*190-\*196

**NOTES:** 1. Options for keypad address 16 are set by the factory and cannot be changed.)  
2. Each keypad must be assigned a unique address. Keypads programmed with the same address will give unpredictable results.

### \*190 Keypad 2 Device Address 17 [0] [0]

†Partition/Enable:

VISTA-20P: Enter partition where:

0 = keypad disabled; 1-3 = part. no. (3 = com)

VISTA-15P: 1 = enable; 0 = disable

Sound: 0 = no suppression

1 = suppress arm/disarm and E/E beeps

2 = Suppress chime beeps only

3 = suppress arm/disarm, E/E, and chime beeps

### \*191 Keypad 3 Device Address 18 [0] [0]

See field \*190 for entries.

Partition/ Sound  
Enable

### \*192 Keypad 4 Device Address 19 [0] [0]

See field \*190 for entries.

Partition/ Sound  
Enable

### \*193 Keypad 5 Device Address 20 [0] [0]

See field \*190 for entries.

Partition/ Sound  
Enable

### \*194 Keypad 6 Device Address 21 [0] [0]

See field \*190 for entries.

Partition/ Sound  
Enable

### \*195 Keypad 7 Device Address 22 [0] [0]

See field \*190 for entries.

Partition/ Sound  
Enable

### \*196 Keypad 8 Device Address 23 [0] [0]

See field \*190 for entries.

Partition/ Sound  
Enable

### \*197 Exit Time Display Interval [0]

0 = no display; 1-5 = seconds between display refresh

**NOTE:** If enabled and using only 2-digit fixed-word keypads (e.g., 6150RF), do not set exit delay time greater than 96 seconds. See Inst. Instr. for explanation.

### \*198 Display Partition Number [0]

(VISTA-20P; for Alpha Display Keypads)

0 = no; 1 = yes (partition no. appears on Alpha Display)

### \*199 ECP Fail Display [0]

0 = 3-digit display ("1" + device address)

1 = 2-digit fixed-display as "91"

## Configurable Zone Types Worksheets

Configurable zone types 90 and 91 can be programmed via downloader software or from a keypad using data fields \*182- \*185. Configurable zone types 92 and 93 (VISTA-20P only) can only be programmed using the downloader software.

Programming Configurable Zone Type options involves making 10 entries in data field \*182 for zone type 90 and field \*184 for zone type 91, where each entry represents the sum of the values of the various options shown in the tables below. Use fields \*183 and \*185 to program Contact ID report codes for these zone types.

ENTRY 1 (See note 5 for RF zones)			ENTRY 2 (See note 5 for RF zones)	
Response when system disarmed and zone is:			Auto Restore	Vent Zone
Intact EOL <i>RF zone normal</i>	Open <i>RF zone N/A</i>	Shorted <i>RF zn off-normal</i>		
0 = normal 1 = alarm 2 = trouble 3 = fault	0 = normal 4 = alarm 8 = trouble 12 = fault	0 = normal 1 = alarm 2 = trouble 3 = fault see note 6	0 = no 4 = yes	0 = no 8 = yes
Entry 1 = EOL + Open			Entry 2 = Short + auto restore + vent zone	

ENTRY 3 (See note 5 for RF zones)			ENTRY 4 (See note 5 for RF zones)	
Response when armed STAY and zone is:			Byp. when disarmed	Byp. when armed
Intact EOL <i>RF zone normal</i>	Open <i>RF zone N/A</i>	Shorted <i>RF zn off-normal</i>		
0 = normal 1 = alarm 2 = trouble 3 = fault	0 = normal 4 = alarm 8 = trouble 12 = fault	0 = normal 1 = alarm 2 = trouble 3 = fault see note 6	0 = no 4 = yes	0 = no 8 = yes
Entry 3 = EOL + Open			Entry 4 = Short + byp. disarmed + byp. armed	


ENTRY 5 (See note 5 for RF zones)			ENTRY 6 (See note 5 for RF zones)	
Response when armed AWAY and zone is:			Dial Delay (see field *50)	Fault Delay (see field *87)
Intact EOL <i>RF zone normal</i>	Open <i>RF zone N/A</i>	Shorted <i>RF zn off-normal</i>		
0 = normal 1 = alarm 2 = trouble 3 = fault	0 = normal 4 = alarm 8 = trouble 12 = fault	0 = normal 1 = alarm 2 = trouble 3 = fault see note 6	0 = no 4 = use delay	0 = no 8 = use delay see note 1
Entry 5 = EOL + Open			Entry 6 = Short + dial delay + fault delay	

ENTRY 7		ENTRY 8		
Display Faults	Power Reset/ Verification	Use Entry Delay 1/2	Use Exit Delay	Respond as Interior Type
0 = show alarms when armed & disarmed 1 = don't show alarms when armed (show alarms, trbles, faults when disarmed) 3 = never show any alarms, trbles, faults	0 = no 4 = power reset after fault (by code + OFF) 12 = verification (see zone type 16)	0 = no 1 = delay 1 2 = delay 2	0 = no 4 = use exit delay	0 = no 8 = yes see note 2
Entry 7 = fault display + power reset/verification		Entry 8 = entry delay 1/entry delay 2 + exit delay + interior zone type		

ENTRY 9			ENTRY 10	
Alarm Sounds	Use Bell Timeout	Respond as Fire Zone	Trouble Sounds	Chime when Chime Mode On
0 = none 1 = steady keypad 2 = steady bell and keypad 3 = pulsing bell and keypad	0 = no 4 = yes see fields *32, *33	0 = no 8 = yes see zone type 09; see note 4	0 = none 1 = periodic beep 2 = trouble beeps	0 = no 4 = yes
Entry 9 = alarm sounds + bell timeout + fire zone			Entry 10 = trouble sounds + chime	

Entries for Fields *182 and *184		
Entry	Zone Type 90 (field *182)	Zone Type 91 (field *184)
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		

**To calculate the value for each entry:**  
Simply add the values of the selected options in each of the entry's columns (one option per column). For example, to program Entry 2 for "alarm response to short," "auto restore on," but not a "vent zone," enter 5 ("1" for alarm short + "4" for auto restore yes + "0" for vent zone no).

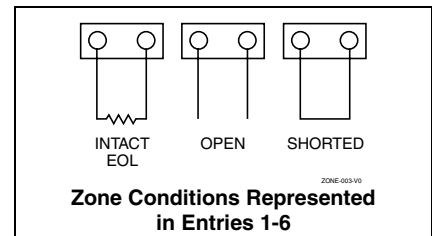

### NOTES:

- Do not use the "fault delay" option with a configurable zone type if it is set for an entry or exit delay, otherwise unpredictable results may occur.
- To create an interior type zone, select "respond as interior type zone" (entry 8, interior type = yes), and set zone response to "fault" in entries 3-4 to ensure fault displays; do not set as "normal," "alarm," or "trouble."
- Do not set fire zones to respond as a "fault" (entries 1-6), otherwise faults will not display unless the [\*] key is pressed.
- 4219/4229 modules must use EOLRs or unpredictable results may occur.
- RF Zones: The "open" option in entries 1, 3, and 5 is not applicable for RF zones. Use the "intact EOL" option for normal RF zone conditions and "shorted" for off-normal RF zone conditions.
- Zone-Doubling/Double-Balanced: A short on either zone of a zone-doubled pair or on a double-balanced zone causes a tamper condition.
  - For double-balanced zones, this entry must be "0."
  - For zone-doubled zones, **both** zones of the doubled pair must be assigned the same response to a short.

## \*56 Zone Programming Menu Mode

(press \*56 while in Program mode)

The Zone Programming Worksheet is on page 13.

For each of the following prompts, make the desired entry, followed by the [\*] key to accept the entry. Refer to the Installation and Setup Guide for detailed explanations for each prompt.

### SET TO CONFIRM?

0 = no; 1 = yes (See XMIT TO CONFIRM prompt later in this section.) **We recommend that you confirm the programming of every transmitter.**

### ENTER ZN NUM.

01-64, 91, 92, 95, 96, 99

To quit, enter 00 to quit (returns to data field mode).

### SUMMARY SCREEN:

System displays a summary of the entered zone's current programming. Press [\*] to continue.

### ZONE TYPE

00 = Not used	07 = 24-Hr Audible	20 = Arm-STAY*
01 = Entry/exit #1	08 = 24-Hr Aux	21 = Arm-AWAY*
02 = Entry/exit #2	09 = Fire	22 = Disarm*
03 = Perimeter	10 = Interior w/Delay	23 = No Alarm Resp
04 = Interior Follower	12 = Monitor Zone	24 = Silent Burglary
05 = Trouble Day/Alarm Night	14 = Carbon Monoxide	77 = Keypress
06 = 24-Hr Silent	16 = Fire w/Verify	81 = AAV Monitor Zone

\*5800 button-type transmitters only

90-91 = Configurable

### PARTITION

1, 2, or 3-common (VISTA-20P)

### REPORT CODE

1-9, #+10 for 0, #+11 for B, #+12 for C, #+13 for D, #+14 for E, #+15 for F  
For Contact ID®, enter any non-zero entry as the first digit to enable reporting for this zone.

To disable the report code for this zone, enter 00.

### HARDWARE TYPE

Appears only for zones 02-08. Zone 1 is automatically set for EOL operation. Enter the desired hardware type:

0 = EOL; 1 = NC; 2 = NO; 3 = zone doubling (ZD)†; 4 = double-balanced (DB)† († VISTA-20P)

### RESPONSE TIME

For hardwired zones 01-08. Enter the desired response time for this zone:

0 = 10mSec; 1 = 350mSec; 2 = 700mSec; 3 = 1.2 secs (see field \*174).

NOTE: If zone doubling is being used, the response time selected for zones 02-08 automatically applies to each zone's associated doubled zone.

### INPUT TYPE

Skipped for zones 2-8, and for zones 10-16 if zone-doubling enabled. Enter the input type: 2 = AW (Aux wired zone); 3 = RF (supervised RF); 4 = UR (unsupervised RF); 5 = BR (unsupervised button type)

NOTE: To change the input type of a previously programmed wireless device to a wired zone, you must first delete the transmitter's serial number.

### INPUT S/N

Enroll the transmitter's serial number and loop number as follows:

- a. Transmit two open/close sequences (for button-type transmitters, press and release the button twice, waiting about 4 seconds before pressing the button the second time).

OR

- b. Manually enter the 7-digit serial number printed on the label of the transmitter. Press the [\*] key to move to the "L" position, then enter the loop number.  
Use the [A] (Advance) and [B] (Back) keys to move the cursor forward and back within the screen. Pressing the [C] (Copy) key will insert the previously enrolled serial number, if desired (used when programming a transmitter with several input loops).

To delete an existing serial number, enter 0 in the loop number field. The serial number will change to 0's. If 0 was entered in error, simply re-enter the loop number or press [#], and the serial number will return to the display.

2. Press [\*] to continue. The system now checks for a duplicate serial/loop number.  
If no duplicate is found, the display shows the serial number and loop number.
3. Press [\*] to continue to confirmation screen.

(prompts continued in next column)

### XMIT TO confirm

Appears if you answered "Yes" at the "Set to Confirm" prompt. Activate the loop input or button that corresponds to this zone.

Press [\*] to continue.

If the serial/loop number transmitted does not match the serial number entered, a display showing the entered and the received serial/loop numbers appears.

If so, activate the loop input or button on the transmitter once again. If a match is not obtained, press the [#] key twice and then enter (or transmit) the correct serial number.

Press [\*] to continue

If the serial number transmitted matches the serial number entered, the keypad will beep 3 times and a summary display will appear, showing that zone's programming. An "s" indicates that a transmitter's serial number has been enrolled.

Press [\*] to accept the zone information and continue.

### PROGRAM ALPHA?

Press 1 if you want to program descriptors for the zone now, and refer to the \*82 Descriptor Programming section for procedure. To program descriptors later, enter 0 (no).

Press [\*] to return to the ENTER ZN NUM prompt.

## \*58 Expert Zone Programming Mode

(press \*58 while in Data Programming mode)

### SET TO CONFIRM?

Select whether you want confirmation of wireless device enrollment. (See "XMIT TO CONFIRM" prompt later in this section.) **We recommend that you confirm the programming of every transmitter.**

### SUMMARY SCREEN

```
Zn ZT P RC HW: RT
01 09 1 10 EL 1
```

(Typical for Zone 1, initial summary screen)

```
Zn ZT P RC IN: L
10 00 1 10 RF: -
```

(Typical for entered zone number; zone 10 in this example)

System displays summary of zone 1's current programming.

Enter the zone number being programmed, then press [\*]. A summary screen for that zone is displayed, along with any current programming values, and the cursor moves to the Zone Type location. The cursor then automatically moves to the next locations after each entry is made.

### Special Function Keys:

- [A] (Advance) and [B] (Back) keys on the keypad move the cursor within the screen.
- [C] (Copy) key will insert the previous zone's attributes, if desired.
- [D] key starts the **Wireless Key Programming Templates** menu (see Wireless Key Programming Templates section that follows this section).

Sequentially enter Zone Type (ZT), Partition (P)†, and Report Code (RC), then Hardware Type (HW) and Response Time (RT) for basic wired zones 1-8 or Input Device Type (IN) for zones 9 and higher (Loop Number [L] is programmed at the INPUT S/N prompt).

See \*56 Zone Programming Menu Mode section described earlier for entry values.

† applies to VISTA-20P

Press [\*] to save the programming and continue. If needed, press the [#] key to back up without saving.

- For wireless devices (input types RF, UR, BR), continue to the INPUT S/N (serial number/loop number) and XMIT TO CONFIRM prompts described earlier in the \*56 Zone Programming Menu Mode section. When done, the display returns to the initial summary screen prompt to let you program the next zone.
- For wired devices, the display returns to the initial summary screen prompt to let you program the next zone.

To Quit, enter 00 at the zone number location and press [\*].



# Wireless Key Programming Templates (press the [D] key from \*58 Menu mode Summary Screen)

This procedure programs the wireless keys, but a key is not active for arming/disarming until it is assigned to a user number (see **System Operation** section, Assigning Attributes Command in the Installation Instructions).

## TEMPLATE ?

Enter desired template number 1–6 (see chart below), then press [\*] to continue.

To exit the Template screen, press [#]. The system returns to the \*58 Menu mode Summary Screen.

## TEMPLATE SUMMARY

L	01	02	03	04
T	23	22	21	23

The selected template is displayed.

The top line represents loop numbers, the bottom line represents each loop's zone type.

Press [\*] to accept template and continue.

## PARTITION (VISTA-20P)

Enter the partition (1, 2, or 3-common) in which the key is to be active.

Press [\*] to continue.

## ENTER START ZONE

The system displays the lowest zone number of the highest available consecutive 4-zone group.

To start at a different zone number, enter the zone desired, and press [\*]. If the system has four consecutive zones beginning with that zone, the zone number is displayed. If not, the system will again display a suggested zone that can be used.

If the required number of consecutive zones is not available at all, the system will display "00".

Press [\*] to accept.

Continue to the INPUT S/N (serial number/loop number) and XMIT TO CONFIRM prompts described earlier in the \*56 Menu Mode section.

**IMPORTANT:** When confirmed, the key is not active for arming/disarming until it is assigned to a user number (using the assigning attributes command, attribute "4"). See System Operation section in Installation Instructions.

When done, the keypad beeps three times and the display returns to the ENTER START ZONE prompt to let you enter the starting zone for the next wireless key.

## Wireless Key Predefined Default Templates

For 5804	Loop	Function	Zone Type	For 5804BD	Loop	Function	Zone Type
TEMPLATE 1	1	No Response	23	TEMPLATE 4	1	No Response	23
	2	Disarm	22		2	No Response	23
	3	Arm Away	21		3	Arm Away	21
	4	No Response	23		4	Disarm	22
TEMPLATE 2	1	No Response	23	TEMPLATE 5	1	No Response	23
	2	Disarm	22		2	Arm Stay	20
	3	Arm Away	21		3	Arm Away	21
	4	Arm Stay	20		4	Disarm	22
TEMPLATE 3	1	24-hour audible	7	TEMPLATE 6	1	24-hour audible	7
	2	Disarm	22		2	Arm Stay	20
	3	Arm Away	21		3	Arm Away	21
	4	Arm Stay	20		4	Disarm	22


## 5800 Series Transmitter Input Loop Identification

All of the transmitters illustrated have one or more unique factory assigned input (loop) ID numbers. Each of the inputs requires its own programming zone (e.g., a 5804's four inputs require four programming zones).

For information on any transmitter not shown, refer to the instructions accompanying that transmitter for details regarding loop numbers, etc.

**UL NOTE:** The following transmitters are not intended for use in UL installations: 5802MN, 5802MN2, 5804, 5804BD, 5814, 5816TEMP, 5819, 5819WHS & BRS, and 5850.

The 5827BD and 5800TM can be used in UL Listed Residential Burglar installations.

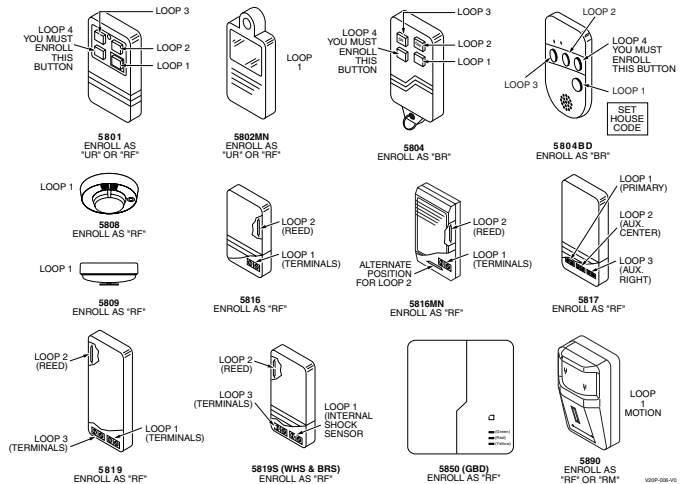

## \*57 Function Key Programming (press \*57 while in Data Programming mode)

The Function Key Worksheet is on page 14.

### PRESS KEY TO PGM

Press the desired function key to be programmed, A-D, then press [\*] to continue.

When done, press 0 to exit this mode and return to data field mode.

**NOTE:** A key programmed as a function key is no longer available to be used as an end-user macro key or panic key.

### PARTITION

Enter the partition (1-3) in which this function key will be active.

### KEY "A" FUNC

Enter the desired function for this key:

- 00 = For the Function key selected, the function will be as follows (default):
  - If A selected = Zone 95 (emergency key, same as [1] [\*] pair)
  - If B selected = Zone 99 (emergency key, same as [\*] [#] pair)
  - If C selected = Zone 96 (emergency key, same as [3] [#] pair)
  - If D selected = Single-button paging (continued in next column)

### KEY "A" FUNC (continued)

- 01 = Single-button paging (sends a 999-9999 message to pager)
  - 02 = Display time
  - 03 = Arm AWAY (reports as User 00 if closing reports are enabled)
  - 04 = Arm STAY (reports as User 00 if closing reports are enabled)
  - 05 = Arm NIGHT-STAY (reports as User 00 if closing reports enabled)
  - 06 = Step Arming (arms STAY, then NIGHT-STAY if enabled, then AWAY)
  - 07 = Output Device Command (for device programmed as system operation type 66 in \*80 Menu Mode)
  - 08 = Communication Test (sends Contact ID code 601)
  - 09 -12= Macro Keys 1-4 respectively (defined by [#] [6] [6] command)
- NOTE:** Macros 11-12 apply to VISTA-20P only

Press [\*] to continue; returns to key number prompt with the next function key letter displayed.

## \*79 Menu Mode

(press \*79 while in Programming mode)

The \*79 Device Mapping Worksheet is on page 14.

### ENTER OUTPUT NO.

01-18 = VISTA-20P relays/X-10; 01-08, 17, 18 = VISTA-15P relays/X-10  
[\*] to continue

### OUT NORM LOW (appears only for triggers 17/18)

0 = no (standard default); sets the output level normally high  
1 = yes; sets the output normally low (can be used for resetting 4-wire smoke detectors)

[\*] to return to Output Number prompt

### OUTPUT TYPE

0 = delete; 1 = relay (skip to "B" prompt); 2 = Powerline Carrier device (skip to "A" prompt)

[\*] to continue.

"A" (if X-10 was selected)

### UNIT No.

Enter the unit code (01-16, set at the device).

[\*] to return to the Output Number prompt continue

"B" (if relay was selected)

### MODULE ADDR

Enter the predefined address for this module (07-15; see Table of Device Addresses on page 2).

Make sure the module's DIP switches are set to the selected address.

[\*] to continue

### REL POSITION (actual relay number on module)

For 4204 modules, relay numbers are 1-4. For 4229 modules, relay numbers are 1-2.

[\*] to return to the Output Number prompt for programming the next device

## \*80 Menu Mode

(press \*80 while in Programming mode)

The Output Definition Worksheet is on page 15.

### OUTPUT FUNCT. #

Enter the output function number to be defined (VISTA-20P: 01-48; VISTA-15P: 01-24). [\*] to continue; 00 = exit

### SUMMARY SCREEN

01	A	E	P	Trig
?00	0	0	-	ZL=00

This screen displays a summary of the current output programming  
A = Output Action; E = Triggering event; P = Partition; Trig = Trigger type  
Question mark indicates the device shown has not been mapped. Use \*79 Menu mode to map the device.

[\*] to continue

### ACTIVATED BY

0 = delete (deletes the output function and any previous programming); a confirmation prompt appears.

To delete this output definition, press 1. If you do not want to delete this output, press 0.

1 = zone list (go to "A" prompt); 2 = zone type (go to "B" prompt); 3 = zone number (go to "C" prompt)

Press [\*] to continue

"A" (if zone list was selected)

### ZN LIST

Enter the desired zone list number (01-08). At the ENTER EVENT prompt, enter the zone list event that will activate this output (0 = restore; 1 = alarm; 2 = fault; 3 = trouble)

Press [\*] to continue and skip to the "Output Action" prompt.

"B" (if zone type was selected)

### ENTER ZN TYPE

Enter the desired zone type. See list below \*80 Worksheet for zone types.

At the PARTITION prompt, enter the partition in which this zone type will occur (0 = any partition; 1 = partition 1; 2 = partition 2; 3 = partition 3).

Press [\*] to continue and skip to the "Output Action" prompt.

"C" (if zone number was selected)

### ENTER ZN NO.

Enter the desired zone number, then press [\*] to continue. At the ENTER EVENT prompt, enter the zone event that will activate this output (0 = restore; 1 = alarm/fault/trouble).

Press [\*] to continue to the OUTPUT ACTION prompt

### OUTPUT ACTION

0 = off; 1 = Close for 2 seconds; 2 = Close and Stay Closed; 3 = Continuous Pulse 1 sec on and 1 sec off

4 = Change Device State; 5 = Duration 1 (see data field \*177); 6 = Duration 2 (see data field \*177)

Press [\*] to continue.

## \*80 Menu Mode (continued)

### ENTER OUTPUT NO.

Enter the device output number (programmed in \*79 Menu Mode) you want associated with this output.

01-16 = VISTA-20P output no.; 01-08 = VISTA-15P output no.; 17-18 = on-board triggers

Press [\*] to continue.

### SUMMARY SCREEN

A summary screen appears showing the programmed settings.

Press [\*] to return to OUTPUT FUNCTION NUMBER prompt.

## \*81 Menu Mode

(press \*81 while in Programming mode)

The Zone List Worksheet is on page 14.

### ZONE LIST NO.

Enter the zone list number (01-12) to program (or 00 to exit this mode).

Press [\*] to continue.

### ENTER ZN NUM.

Enter each zone number (01-64†) to add to the zone list, followed by pressing [\*] (example, 01\*, 02\*, 03\*).

Press 00 to continue.

† VISTA-20P = 01-64; VISTA-15P = 01-06, 09-34, 49-56.

**IMPORTANT:** Do not include fire zones in zone lists that are used to STOP device actions.

### DEL ZN LIST?

0 = don't delete list; current zone list remains saved

1 = delete this zone list; All zones in the zone list will be deleted.

[\*] to continue

### DELETE ZONE?

0 = don't delete zones; save the entire zone list and return to the Zone List No. prompt

1 = go to next prompt to delete zones

[\*] to continue

### ZN TO DELETE?

Enter each zone (01-64†) to be deleted from the list, following each with [\*]. 00 when done to return to the Zone List No. prompt.

† VISTA-20P = 01-64; VISTA-15P = 01-06, 09-34, 49-56.

## \*82 Alpha Descriptor Programming

### PRE-DEFINED DESCRIPTORS

#### PROGRAM ALPHA

0 = no (quit Alpha mode)

1 = yes

Press [\*] or [#] to continue.

#### CUSTOM WORDS

0 = no (continue to descriptor programming)

1 = yes (go to custom word programming)

Press 0 to program standard alpha descriptors. The system will then display the descriptor for zone 1.

To program custom words, press 1 (custom words are described later).

Press [\*] to continue.

#### \* ZN 01

Descriptor screen for zone 1 appears. To program a descriptor (up to 3 words) for a zone, do the following:

- Press [\*] plus the desired zone number (existing descriptor, if any, is displayed), then press [\*] plus the zone number again (flashing cursor appears).
- a. Press [#] plus the 3-digit number from the Alpha Vocabulary List on page 11 for the first word.  
b. Press [6] to accept the word and move the cursor for the next word.
- Repeat steps 2a and 2b for the second and third words (if used).
- When all words have been entered, press [8] to save the descriptor for that zone. The flashing cursor disappears.
- Repeat steps 1-4 to assign a descriptor for the next zone.
- When all descriptors have been entered, press [\*] + 0 + 0 (or simply press [#]) after the last descriptor has been saved to return to the PROGRAM ALPHA? prompt.  
Enter 0 (no) at the prompt to exit this mode and return to Data Field mode.

## \*82 Alpha Descriptor Programming (continued)

### ADDING CUSTOM WORDS (up to 10 words)

For custom words, the keys have the following functions:

- [4] moves cursor one space to the left.
- [6] moves cursor one space to the right.
- [8] saves the new word in the system's memory.

1. Select Custom Word mode (enter 1) when the prompt "CUSTOM WORD ?" is displayed.
2. Enter the number (01-10, or 11, 12, 13 for partition descriptors- see below) of the custom word or word string to be created, corresponding to index numbers 245 - 254 respectively. A cursor appears at the beginning of the second line.  
**NOTE:** Custom words 8, 9, and 10 are "reminder words" that can be programmed to display using Scheduling Mode.
3. Refer to the Character (ASCII) Chart on the next page.  
Press [#], followed by the two-digit entry for the first letter you would like to display (e.g., # 6 5 for "A"). The cursor moves to the right, in position for the next character.  
**To delete a character,** simply enter the SPACE character (#32) at the unwanted character's location.

4. Repeat Step 3 to create the desired word(s). Each word can be a maximum of 10 characters (except custom message/partition descriptor word numbers 11, 12, and 13, which can be a maximum of 16 characters).
5. When the word is complete, press the [8] key to save the custom word(s) in the vocabulary list and return to the "CUSTOM WORD ?" display.
6. Repeat Steps 1-5 for other custom words to be entered. To change a custom word, just overwrite it. When all words have been programmed, enter 0 at the "CUSTOM WORD ?" prompt to return to the Program Alpha prompt. Enter 0 again to exit Descriptor mode.

**To Assign Partition/Custom Message Descriptors,** use Adding Custom Words procedure, but:

VISTA-15P: Use word number 11 in step 2. The custom message replaces the standard "DISARMED Ready to Arm" message.

VISTA-20P: Use the following word numbers in step 2:

11 = partition 1; 12 = partition 2; 13 = common lobby

### ALPHA VOCABULARY LIST (For Entering Zone Descriptors)

000 (Word Space)	• 057 DOOR *	- L -	- R -	- V -
• 001 AIR	• 059 DOWN	• 106 LAUNDRY *	155 RADIO	209 VALVE
• 002 ALARM *	• 060 DOWNSTAIRS	• 107 LEFT	• 156 REAR	210 VAULT
004 ALLEY	061 DRAWER	108 LEVEL	157 RECREATION	212 VOLTAGE
005 AMBUSH	• 062 DRIVEWAY	• 109 LIBRARY *	159 REFRIGERATION	- W -
• 006 AREA	• 064 DUCT	• 110 LIGHT	160 RF	213 WALL
• 007 APARTMENT	- E -	111 LINE	• 161 RIGHT	214 WAREHOUSE
• 009 ATTIC *	• 065 EAST	• 113 LIVING *	• 162 ROOM *	• 216 WEST
010 AUDIO	066 ELECTRIC	• 114 LOADING	163 ROOF	• 217 WINDOW *
- B -	067 EMERGENCY *	115 LOCK	- S -	• 219 WING
• 012 BABY *	068 ENTRY	116 LOOP	164 SAFE	220 WIRELESS
• 013 BACK *	• 069 EQUIPMENT	117 LOW	165 SCREEN	- X -
• 014 BAR	• 071 EXIT *	• 118 LOWER	166 SENSOR	222 XMITTER
• 016 BASEMENT *	072 EXTERIOR	- M -	• 167 SERVICE	- Y -
• 017 BATHROOM *	- F -	• 119 MACHINE	• 168 SHED *	223 YARD
• 018 BED	• 073 FACTORY	121 MAIDS	169 SHOCK	- Z -
• 019 BEDROOM *	075 FAMILY	122 MAIN *	• 170 SHOP *	224 ZONE (No.)
020 BELL	• 076 FATHERS	• 123 MASTER *	171 SHORT	• 225 ZONE *
• 021 BLOWER	• 077 FENCE	• 125 MEDICAL *	• 173 SIDE *	• 226 0
• 022 BOILER	• 079 FIRE *	126 MEDICINE	174 SKYLIGHT	• 227 1
023 BOTTOM	• 080 FLOOR *	128 MONEY	175 SLIDING *	• 228 1ST *
025 BREAK	081 FLOW	129 MONITOR	• 176 SMOKE *	• 229 2
• 026 BUILDING	082 FOIL	• 130 MOTHERS	• 178 SONS	• 230 2ND *
- C -	• 083 FOYER	• 131 MOTION *	• 179 SOUTH	• 231 3
028 CABINET	084 FREEZER	132 MOTOR	180 SPRINKLER	• 232 3RD *
• 029 CALL	• 085 FRONT *	- N -	• 182 STATION	• 233 4
030 CAMERA	- G -	• 134 NORTH	184 STORE	• 234 4TH
031 CAR	• 089 GARAGE *	135 NURSERY	• 185 STORAGE *	• 235 5
033 CASH	• 090 GAS	- O -	186 STORY	• 236 5TH
034 CCTV	091 GATE	• 136 OFFICE *	190 SUPERVISED *	• 237 6
035 CEILING	• 092 GLASS	• 138 OPEN *	191 SUPERVISION	• 238 6TH
036 CELLAR	093 GUEST	139 OPENING	192 SWIMMING	• 239 7
• 037 CENTRAL	094 GUN	• 140 OUTSIDE	193 SWITCH	• 240 7TH
038 CIRCUIT	- H -	142 OVERHEAD	- T -	• 241 8
• 040 CLOSED *	• 095 HALL *	- P -	194 TAMPER	• 242 8TH
• 046 COMPUTER	• 096 HEAT	143 PAINTING	196 TELCO	• 243 9
047 CONTACT	098 HOLDUP	• 144 PANIC *	197 TELEPHONE	• 244 9TH
- D -	099 HOUSE	145 PASSIVE	• 199 TEMPERATURE	245 Custom Word #1
• 048 DAUGHTERS	100 INFRARED	• 146 PATIO *	200 THERMOSTAT	246 Custom Word #2
049 DELAYED	• 101 INSIDE *	147 PERIMETER	• 201 TOOL	247 Custom Word #3
• 050 DEN *	102 INTERIOR	• 148 PHONE	202 TRANSMITTER	248 Custom Word #4
051 DESK	103 INTRUSION	150 POINT	- U -	249 Custom Word #5
• 052 DETECTOR *	- J -	151 POLICE *	• 205 UP	250 Custom Word #6
• 053 DINING *	104 JEWELRY	• 152 POOL *	• 206 UPPER	251 Custom Word #7
054 DISCRIMINATOR	- K -	• 153 POWER	• 207 UPSTAIRS *	252 Custom Word #8
055 DISPLAY	• 105 KITCHEN *		• 208 UTILITY *	253 Custom Word #9
				254 Custom Word #10

**Note:** Bulleted (•) words in **boldface type** are those that are also available for use by the 4285/4286 Phone Module. If using a Phone module, and words other than these are selected for Alpha descriptors, the module will not provide annunciation of those words.

*Italicized words followed by an asterisk indicate those words supported by the 6160V/6150V Voice Keypads*

### CHARACTER (ASCII) CHART (For Adding Custom Words)

32 (space)	41 )	50 2	59 ;	68 D	77 M	86 V
33 !	42 *	51 3	60 <	69 E	78 N	87 W
34 "	43 +	52 4	61 =	70 F	79 O	88 X
35 #	44 ,	53 5	62 >	71 G	80 P	89 Y
36 \$	45 -	54 6	63 ?	72 H	81 Q	90 Z
37 %	46 .	55 7	64 @	73 I	82 R	
38 &	47 /	56 8	65 A	74 J	83 S	
39 '	48 0	57 9	66 B	75 K	84 T	
40 (	49 1	58 :	67 C	76 L	85 U	

# Setting Schedules (Installer Code + [#] + [6] [4])

## ENTER SCHED NO.

VISTA-20P: 01-16 = end-user schedules; 17-32 = installer-only schedules  
 VISTA-15P: 01-04 = end-user schedules; 05-08 = installer-only schedules  
 [\*] to continue.  
 To Quit, enter 00.

## ENTER EVENT

00 = clear event  
 01 = Relay On/Off  
 02 = User Access  
 03 = Latch Key Report to Pager (sent to all pagers in the user's partition; message sent is 777-7777. User must be enabled for paging and system must be armed before reporting can occur.)  
 04 = Forced Stay Arming (Forced bypass is automatically enabled regardless of setting in field \*23)  
 05 = Forced Away Arming (Forced bypass is automatically enabled regardless of setting in field \*23)  
 06 = Auto Disarm  
 07 = Display "Reminder"  
 10 = Display custom words (if selected, system displays custom words 8, 9, and 10 at defined time. Can be used as installer's reminder message to the end user); programmable by installer only  
 11 = Periodic Test Report (see key commands in **Test Report Code**, data field \*64, to quickly set periodic test reporting intervals); programmable by installer only  
 [\*] to continue.

## DEVICE NUMBER (for event 1 relay on/off)

01-18; [\*] to continue.

## GROUP NUMBER (for event 2 user access)

1-8; [\*] to continue.

## PARTITION (for events 3-7,10,12)

0 = all partitions; 1 = partition 1; 2 = partition 2; 3 = common  
 [\*] to continue.

## START

01-12 = hour; 00-59 = minute; 0 = AM; 1 = PM; to select days, position the cursor under the desired days using the [\*] key to move forward, then press "1" to select the day.  
 [\*] to continue.

## STOP (for events 1 relay on/off; 2 user access; 3 latch key report)

See START for entries. [\*] to continue.

## REPEAT

0 = do not repeat; 1 = repeat schedule weekly; 2 = repeat schedule biweekly (every other week); 3 = repeat schedule every third week; 4 = repeat schedule every fourth week  
 [\*] to continue

## RANDOMIZE (for events 01 and 11)

0 = no; 1 = yes  
 If selected, the scheduled start and stop times will vary within 60 minutes of the "hour" time. For example, if a schedule is set to start at 6:15pm, it will do so the first time 6:15pm arrives, but on subsequent days it will start anytime between 6:00 and 6:59 p.m.

**NOTE:** Do not use the random option if the start and stop times are within the same "hour" setting, otherwise unpredictable results may occur (e.g., the randomized stop time may occur before the start time).

[\*] to continue and return to ENTER SCHED NO. prompt to program the next schedule.

**SCHEDULES WORKSHEET** (installer code + [#] + [6] [4]; *master code can only access schedules 01-16 for VISTA-20P, 01-04 for VISTA-15P, and events 00-07 for both controls; VISTA-15P supports up to 8 schedules, VISTA-20P supports up to 32 schedules*)

No.	Event (see list below)	Device No. for "01" events: enter 01-18	Group No. for "02" events: enter 1-8	Partition for "04-06" events: enter 1, 2, or 3 (VISTA-20P)	Start Time/ Days	Stop Time/ Days	Repeat (1-4)	Random (yes/no)
01								
02								
03								
04								
05								
06								
07								
08								
09								
10								
11								
12								
13								
14								
15								
16								
17								
18								
19								
20								
21								
22								
23								
24								
25								
26								
27								
28								
29								
30								
31								
32								

Events: **Master/Installer**  
 00 = clear event  
 01 = device on/off  
 02 = user access  
 03 = latch key report  
**Installer Only**  
 04 = forced STAY arm  
 05 = forced AWAY arm  
 06 = auto disarm  
 07 = display "reminder"  
 10 = display custom words 8-10  
 11 = periodic test report

Repeat Options: 0 = none; 1 = repeat weekly; 2 = repeat every other week; 3 = repeat every third week; 4 = repeat every fourth week

\*56 ZONE PROGRAMMING WORKSHEET (VISTA-15P supports up to 32 zones: 1-6, 9-34, 49-56) [default shown in brackets]

Zone	Zn Type	Part.	Report	Hardwire Type	Rsp. Time	Location	
1	[09]	[1]		[EOL]	[1]		
2	[01]	[1]		[EOL]	[1]		
3	[03]	[1]		[EOL]	[1]		
4	[03]	[1]		[EOL]	[1]		
5	[03]	[1]		[EOL]	[1]		
6	[03]	[1]		[EOL]	[1]		
7	[03]	[1]		[EOL]	[1]		
8	[03]	[1]		[EOL]	[1]		
Zone	Zn Type	Part.	Report	Input Type	Loop	Serial No.	Location
9							
10							
11							
12							
13							
14							
15							
16							
17							
18							
19							
20							
21							
22							
23							
24							
25							
26							
27							
28							
29							
30							
31							
32							
33							
34							
35							
36							
37							
38							
39							
40							
41							
42							
43							
44							
45							
46							
47							
48							
49		[1]		[BR]			
50		[1]		[BR]			
51		[1]		[BR]			
52		[1]		[BR]			
53		[1]		[BR]			
54		[1]		[BR]			
55		[1]		[BR]			
56		[1]		[BR]			
57		[1]		[BR]			
58		[1]		[BR]			
59		[1]		[BR]			
60		[1]		[BR]			
61		[1]		[BR]			
62		[1]		[BR]			
63		[1]		[BR]			
64		[1]		[BR]			
95	[00]			N/A	N/A	N/A	keypad [1] / [*]
96	[00]			N/A	N/A	N/A	keypad [3] / [#]
99	[06]			N/A	N/A	N/A	keypad [*] / [#]

**NOTES:**  
 Zone Type: see chart on page 12;  
 Report Code: enabled if any digit entered as 1st digit;  
 Hardwire Type (zns 1-8):  
 0 = EOL    3 = ZD  
 1 = NC     4 = DB  
 2 = NO  
 Input Type:  
 2 = AW (zones 9-48)  
 3 = RF (zones 9-48)  
 4 = UR (zones 9-48)  
 5 = BR (zones 49-64)  
**NOTE:** Zones 9-16 not available if zone doubling enabled.  
 Response Time:  
 0 = 10msec  
 1 = 350msec  
 2 = 700msec  
 3 = 1.2 sec  
**Reserved Zones**  
 91 = addressable device report enable/disable default zone type = [05].  
 92 = Duress report enable/disable



**\*57 FUNCTION KEY WORKSHEET**

Option	Function	A			B			C			D			Comments
		P1	P2	com	P1	P2	com	P1	P2	com	P1	P2	com	
01	Paging													
02	Time Display													
03	Arm AWAY													
04	Arm STAY													
05	Arm NIGHT-STAY													
06	Step Arming													
07	Device Activation													Device:
08	Comm. Test													
09	Macro Key 1													Assign each macro key to only a single partition. †
10	Macro Key 2													Assign each macro key to only a single partition. †
11	Macro Key 3													Assign each macro key to only a single partition. †
12	Macro Key 4													Assign each macro key to only a single partition. †
00	Emergency Keys:			zone 95			zone 99			zone 96			paging	
	Personal Emergency													n/a
	Silent Alarm													n/a
	Audible Alarm													n/a
	Fire													n/a

Emergency Keys: A = paired keys [1] / [\*] (zone 95); B = paired keys [\*] / [#] (zone 99); C = paired keys [3] / [#] (zone 96)  
† There are only four macros system-wide.

**OUTPUT RELAYS/POWERLINE CARRIER (X-10) DEVICES WORKSHEET FOR \*79, \*80 and \*81.**  
**Applicable only if Relays and/or Powerline Carrier Devices are to be used.**

**\*79 RELAY/POWERLINE CARRIER (X-10) DEVICE MAPPING (Must program before using \*80)**

Output No.	OUTPUT TYPE			
	Relay		X10	
Module Addr.	Pos (1-4)	Unit No.	Description	
01				
02				
03				
04				
05				
06				
07				
08				

Output No.	OUTPUT TYPE (09-16 apply to VISTA-20P only)			
	Relay		X10	
Module Addr.	Pos (1-4)	Unit No.	Description	
09				
10				
11				
12				
13				
14				
15				
16				
17	On-Board Trigger 1			norm output =
18	On-Board Trigger 2			norm output =

**\*81 ZONE LISTS WORKSHEET**

Fill in the required data on the worksheet below and follow the procedure in the installation manual as you enter the data during the displays and prompts that appear in sequence.

**NOTE:** Record desired zone numbers below, noting that a list may include *any* or *all* of system's zone numbers.

List No.	Used For...	Contains These Zones...
01	General Purpose (GP)	
02	General Purpose	
03	Chime-by-Zone or GP	(see field *26 for Chime-by-Zone option)
04	Cross Zones or GP	(see field *85 for Cross Zone Timer option)
05	Night-Stay Zones or GP	
06	Dial Delay Disable or GP	V20PSIA/V15PSIA; see field *50 for Dial Delay Disable option
07	Unlimited Reports or GP	V20PSIA/V15PSIA; see field *93 for Unlimited Reports option
08	General Purpose	
09	Zones activating pager 1	
10	Zones activating pager 2	
11	Zones activating pager 3	(VISTA-20P)
12	Zones activating pager 4	(VISTA-20P)

**\*80 OUTPUT DEFINITIONS**

Fill in the required data on the worksheet below and follow the programming procedure in the installation manual as you enter the data during the displays and prompts that appear in sequence.

- Notes:** 1. For Relays, 4229 and 4204 devices are programmed in \*79, \*80, and \*81 modes.  
 2. For Powerline Carrier devices (plcd), field \*27 must be programmed with a House Code.  
 3. Tamperers of expansion units cannot be used to operate devices.

Output Function Number (V20P=1-48) (V15P=1-24)	Activation Type and Detail				Partition Number (P) (if using ZT trig) 0 = any 1 = partition 1 2 = partition 2 3 = common	Event (for zone list/activated by)		Action 0 = off 1 = close 2 secs 2 = stay closed 3 = pulse 4 = toggle 5 = duration 1†† 6 = duration 2††	Output Number V20P=1-18 V15P=1-8, 17, 18	Device Type R = relay T = trigger X = X10
	Activated by 0=delete 1=zn list 2=zn type 3=zn no.	Zone List (ZL) 1-8 = list	Zone Type (ZT) (see table below)	Zone No. (ZN) 00=none V20P: 01-64 V15P: 01-06, 09-34, 49-56		By Zone List	By Zone No. 0 = restore 1 = alarm/fit/trbl			
1										
2										
3										
4										
5										
6										
7										
8										
9										
10										
11										
12										
13										
14										
15										
16										
17										
18										
19										
20										
21										
22										
23										
24										
25										
26										
27										
28										
29										
30										
31										
32										
33										
34										
35										
36										
37										
38										
39										
40										
41										
42										
43										
44										
45										
46										
47										
48										

**ZONE TYPE/SYSTEM OPERATION – Choices for Zone Types are:**

- |                        |                              |                          |                       |
|------------------------|------------------------------|--------------------------|-----------------------|
| 00 = Not Used          | 05 = Trouble Day/Alarm Night | 10 = Interior w/Delay    | 24 = Silent Burglary  |
| 01 = Entry/Exit#1      | 06 = 24 Hr Silent            | 12 = Monitor Zone        | 77 = Keypad           |
| 02 = Entry/Exit#2      | 07 = 24 Hr Audible           | 14 = Carbon Monoxide     | 81 = AAV Monitor Zone |
| 03 = Perimeter         | 08 = 24 Hr Aux               | 16 = Fire w/Verification | 90-91 = Configurable  |
| 04 = Interior Follower | 09 = Fire                    | 23 = No Alarm Response   |                       |

**Choices for System Operation are:**

- |                             |                            |                          |
|-----------------------------|----------------------------|--------------------------|
| 20 = Arming–Stay            | 38 = Chime                 | 52 = Kissoff             |
| 21 = Arming–Away            | 39 = Any Fire Alarm        | 54 = Fire Zone Reset     |
| 22 = Disarming (Code + OFF) | 40 = Bypassing             | 58 = Duress              |
| 31 = End of Exit Time       | 41 = **AC Power Failure    | 60 = AAV Trigger         |
| 32 = Start of Entry Time    | 42 = **System Battery Low  | 66 = Function key†       |
| 33 = Any Burglary Alarm     | 43 = Communication Failure | 67 = Bell Failure        |
| 36 = **At Bell Timeout***   |                            | 68 = TELCO Line Fault    |
|                             |                            | 78 = Keypad red LED†††   |
|                             |                            | 79 = Keypad green LED††† |

**Note:** In normal operation mode:  
 Code + # + 7 + NN Key Entry **starts** Device  
 Code + # + 8 + NN Key Entry **stops** Device

- \*\* Use 0 (any) for Partition No. (P) entry.  
 \*\*\* Or at Disarming, whichever occurs earlier.  
 † Use \*57 Menu mode to assign the function key.  
 †† Duration is set in program field \*177.  
 ††† Device action not used for these choices.

